



# Instruction and Installation manuals

## Multipurpose seat

# YU2

## Sideways open type

**For safety, please be sure read this book carefully in detail.  
You are responsible for the safe operation of this product.**

### IMPORTANT

- This product must be properly installed according to the manufacture's instructions.
- Please note that we will NOT be liable in the event an accident occurs due to improper use.
- Retain for future reference.

### ⚠ WARNING

⚠WARNING : The maximum recommended total weight for this multipurpose seat is 100 kg.

⚠WARNING : Keep an eye on user.

⚠WARNING : Be sure to fasten the attached belt.

⚠WARNING : Pay attention to the risk of falling.

⚠WARNING : DO NOT let user stand on the multipurpose seat.

⚠WARNING : DO NOT modify the product.



⚠WARNING : DO NOT use broken or damaged products.

⚠WARNING : Carry out daily inspections to use the product safely.

⚠WARNING : Flammable-Keep Fire Away

### PRODUCT


**This product is multipurpose seat installed in restroom of facilities etc.**

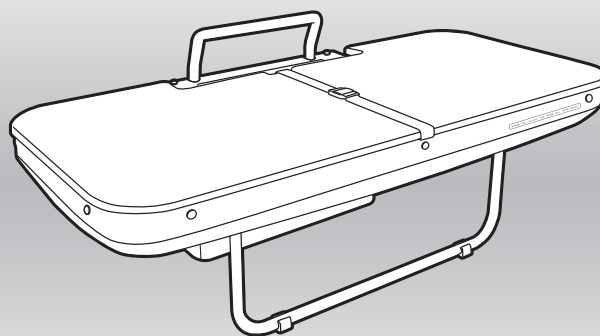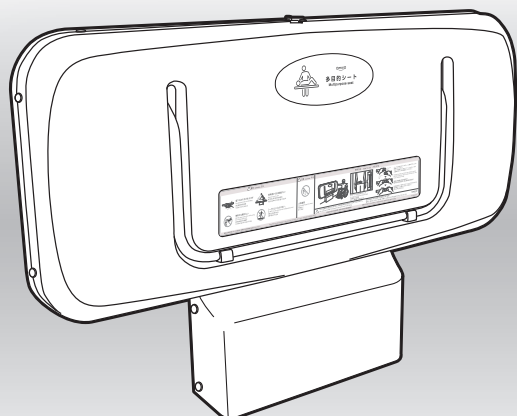

YU2:Sideways open type


W1510 × D740 × SH480 × H660 mm when use

Urethane foam • Vinyl leather PVC

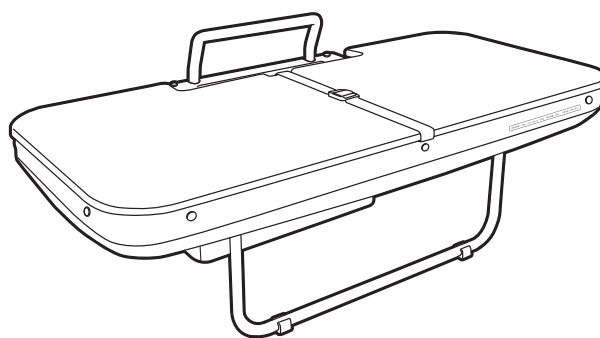


## SPECIFICATION

The built-in gas spring allows smooth opening and closing operations.

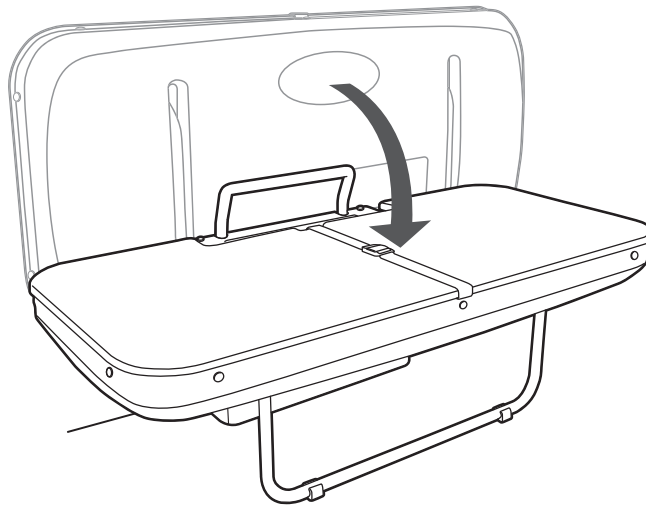

Magnet type buckles that can be attached and removed have been used.

**NOTE:**The seat belt is NOT designed to prevent user from falling.

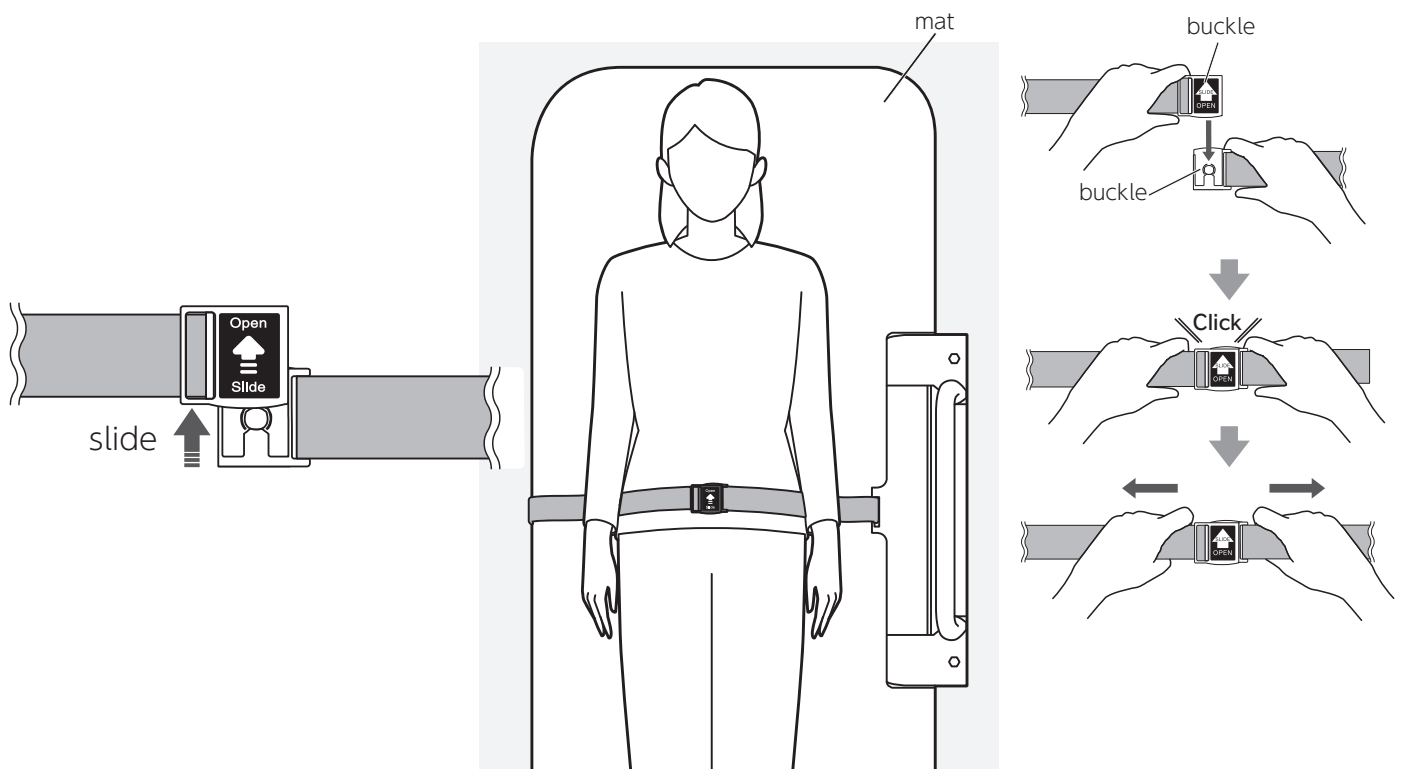

Labelled usege instructions and safety masseges in four languages.

⚠️ 警告 WARNING 경고		⚠️ 注意 CAUTION 주의		ご使用方法 HOW TO USE 사용방법	
<p>落下のおそれがあります Pay attention to the risk of falling. 낙상의 우려가 있습니다</p>	<p>使用者から目を離さない Keep an eye on user. 落下防止用戸乗込時の視線 사용자로부터 눈을 떼지 마십시오</p>	<p>火気厳禁 Flammable-Keep Fire Away 严禁烟火</p>	<p>必ずベルトを着用すること Be sure to fasten the attached belt. 必須腰上安全带  반드시 착용하십시오</p>	<p>バックルをあわせて「カチッ」と音がすることを確認してください。 ベルトを左右に引っ張ってバックルがしっかりと固定されているか確認してください。 Buckle the belt and check the clicking sound. Pull the belt from side to side and check if the belt is buckled firmly.</p>	<p>バックルを合わせて「カチッ」と音がすることを確認してください。 ベルトを左右に引っ張ってバックルがしっかりと固定されているか確認してください。 Buckle the belt and check the clicking sound. Pull the belt from side to side and check if the belt is buckled firmly.</p>
<p>使用中は離れない DO NOT leave user alone while using the multipurpose seat. 使用時の離脱不要离开 사용 중에는 떠나지 마십시오.</p>	<p>シートの上に立たせない。 DO NOT let user stand on the multipurpose seat. 平置山の乗降禁止 시트 위에는 서우지 마십시오.</p>	<p>ベルトは鎖止防止のためであり、使用者の転落を防止するものではありません。安全帯として防止措置、并不能防止用户坠落。 The seat belt is NOT designed to prevent user from falling. 如果产品在发现异常，请停止使用并通知管理者。 제품에 이상이 있는 경우는, 사용하지 않고 관리자에게 알려 주십시오.</p>			

Product have mounting hardware included.

Product manufactured in JAPAN.

### Cleaning method for plastic parts and Vinyl leather PVC

#### Normal cleaning method

- ① Soak a soft cloth with clean water or lukewarm water, and then wring out thoroughly before wiping.
- ② Wipe away any moisture thoroughly with a dry cloth.

#### Cleaning method for when the product is very dirty

- ① Wipe with a cloth soaked lightly with a mild detergent.
- ② Soak a soft cloth with clean water or lukewarm water, and then wring out thoroughly before wiping away any detergent.
- ③ Wipe away any moisture thoroughly with a dry cloth.

### Caution : DO NOT use the following items that may damage the surface of the product.

- Cleanser, detergent containing particles such as polishing powders.
- Acidic detergent, alkaline detergent, chlorine bleach.
- Nylon scrubbing brush, brush, etc.
- Solvents such as thinner and benzine.

## INSPECTION CRITERIA

- There shall be no damage to the product.
- Opening and closing operations shall be smooth with no rattling.
- There shall be no looseness or removal of screws.
- The labels shall not be torn or faded, and the contents readable.

### If there are any abnormalities


- Discontinue use immediately and contact your dealer.

## SAFETY NOTES






- For safety, make sure to read this **Installation Manual** carefully and install the product correctly.
- We recommend that a professional installer set up the multipurpose seat.
- We are NOT liable for any accidents and/or damage that may occur if the multipurpose seat is NOT set up correctly.
- Correctly fix the SMARTPLUG and anchor bolt securely to the concrete layer.
- The product is heavy. Carry out installation work with 2 or more people.

## INSTALLATION SPACE

- Take into consideration the space required for using the product before installing.

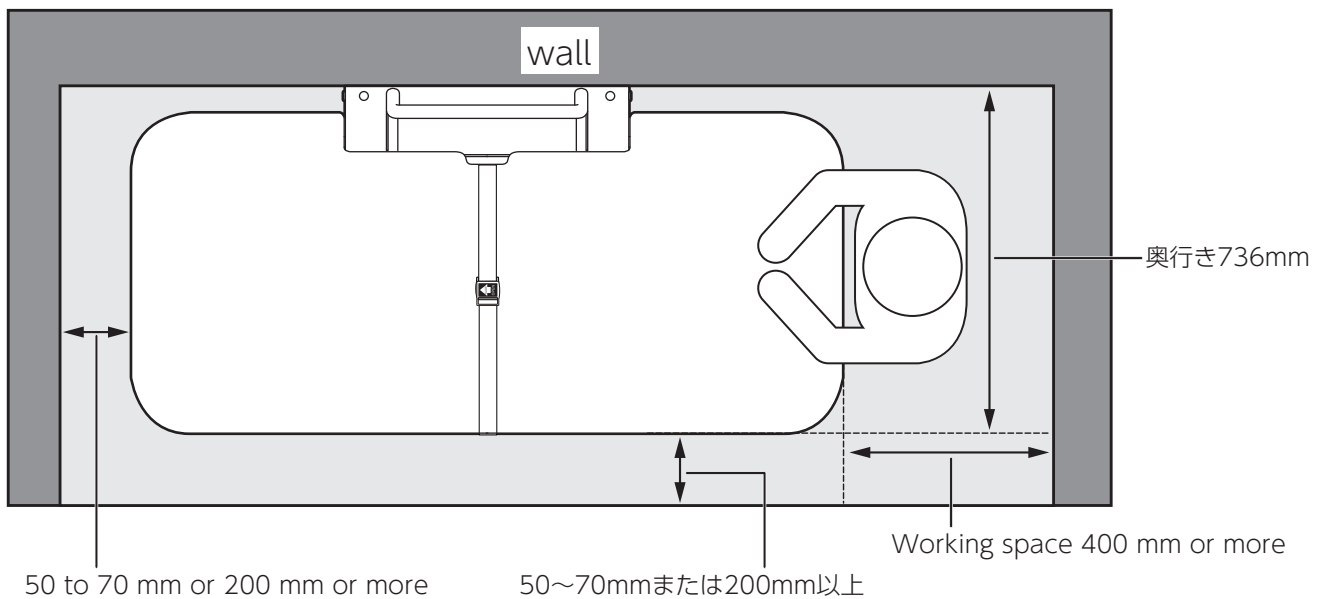

## TOOLS NEEDED

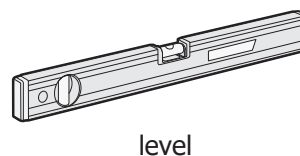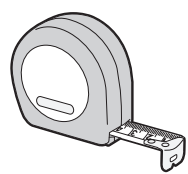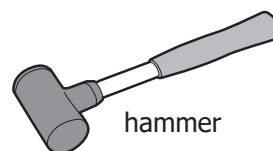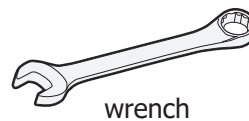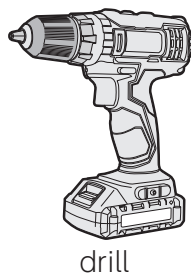

## PACKING LIST

Product have mounting hardware included.




Instruction and Installation manuals (This book)




warning label




pictures, signs, and label

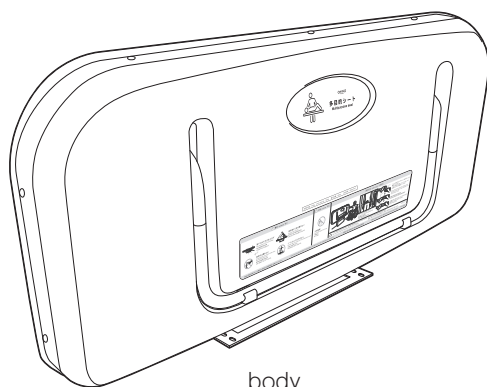


body

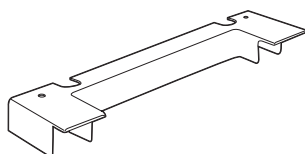


top cover

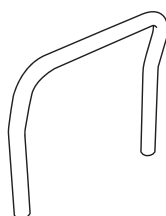

handrail

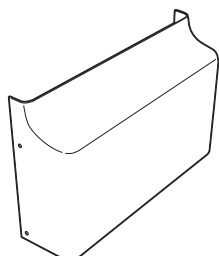

frame stand cover

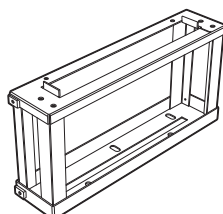

frame stand



six countersunk screws



six screw head covers



six rosette washers



five hexagon nuts with flange



five anchor bolts



two hexagon upset head bolts



four hexagon head bolts





### Step 0-Packing confirmation

- ✓ Remove products from the shipping container and check for any freight damage.
- ✓ Please check if you have all the hardware.





Multipurpose seat YU2



Step 1-Set up the frame stand

① Make marks on the floor (5 places) for inserting anchor bolt.


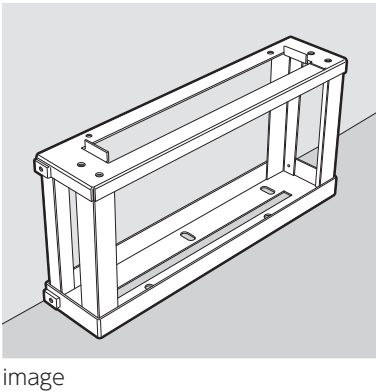
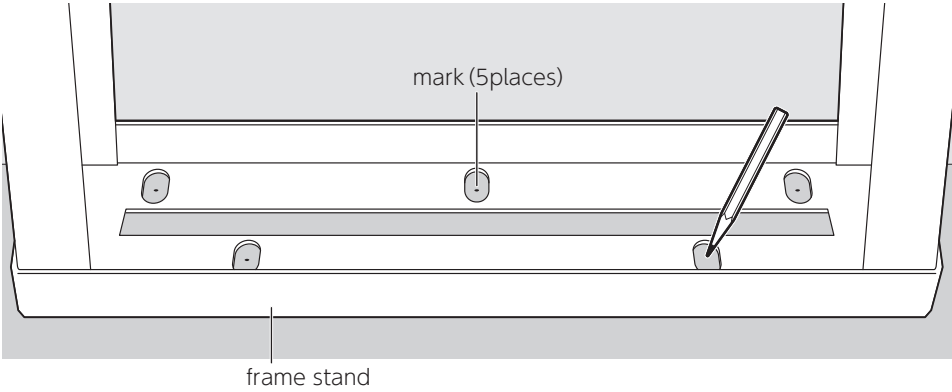


② Install SMARTPLUG into the marked area.

Installing method for anchor bolt			
 concrete layer 50 mm or more	 concrete layer	 concrete layer anchor bolt	 concrete layer anchor pin hammer
① Perforate hole eith wall. • hole diameter : 10.5 mmφ • dolling depth : 50 mm or more • use 10.5 mm drill bit	② Remove concrete powder in hole with dust pump.	③ Anchor bolt insert to hole.	④ Hit anchor pin with hammer.

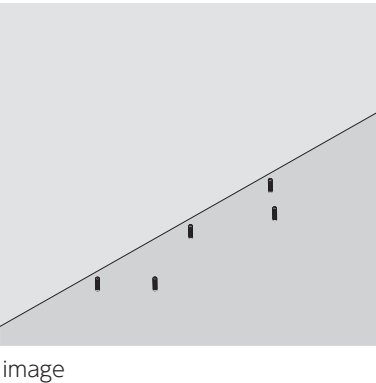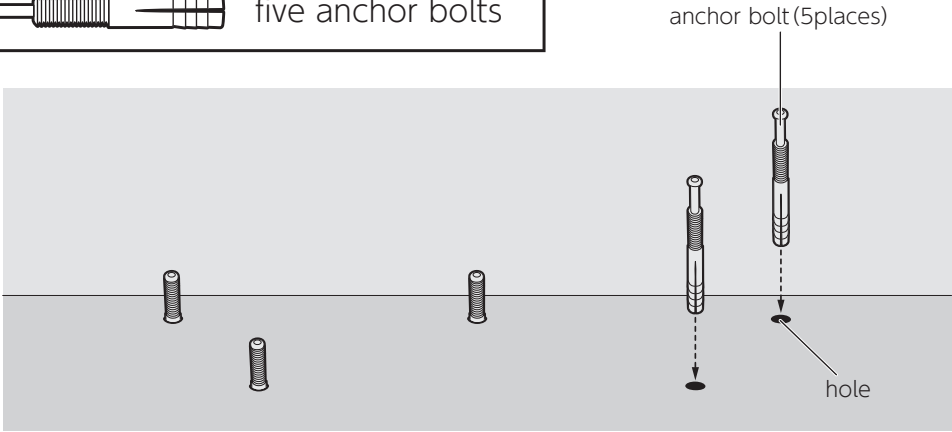


③ The frame stand put on the floor surface, and then fix on the floor (5 places) with hexagon nuts with flange.

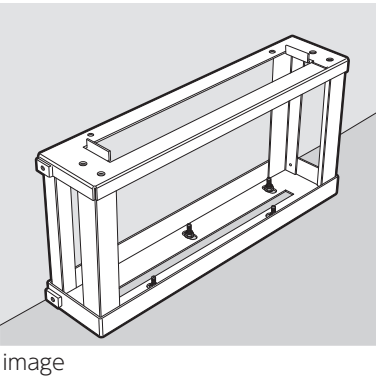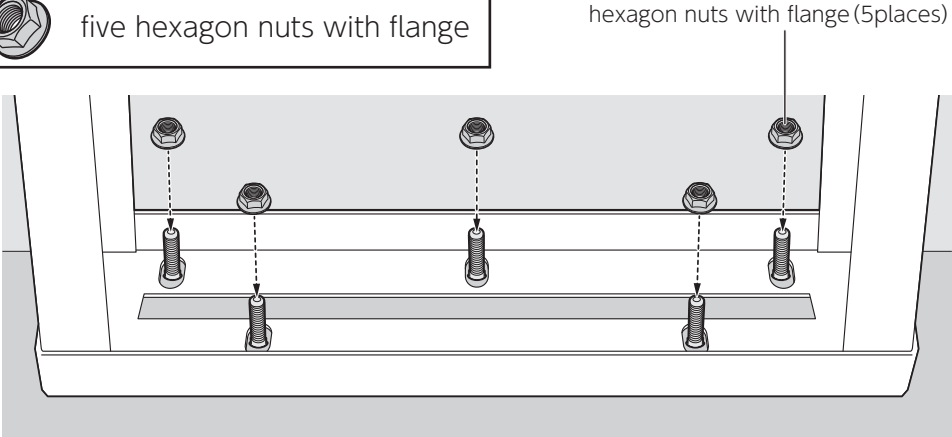

### Step 2-Mount the body

① Put the body on the frame stand.

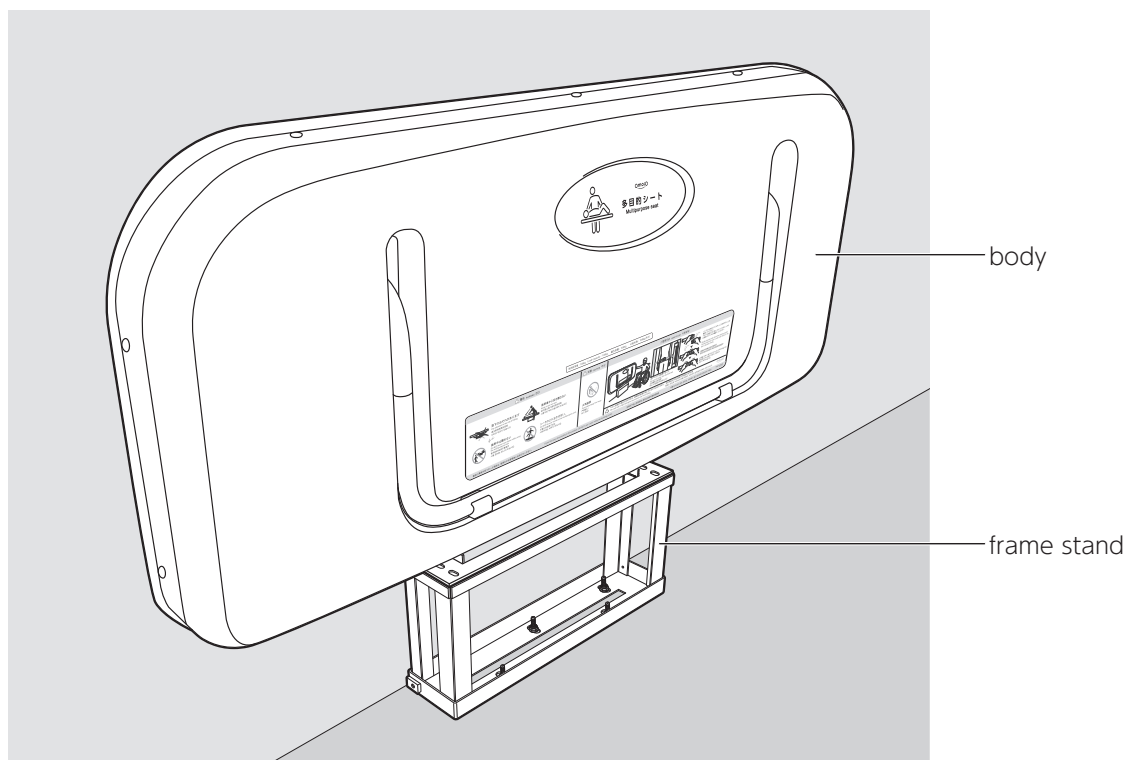

**! CAUTION** ✓ The body parts is large and heavy.



② Pass the hexagon head bolts of through the bolt holes (4 places) of the body chassis, and then fix them.



four hexagon head bolts

hexagon head bolt (4places)

hexagon head bolt

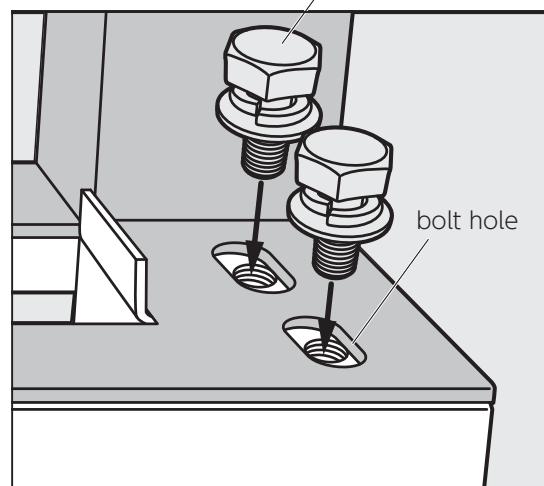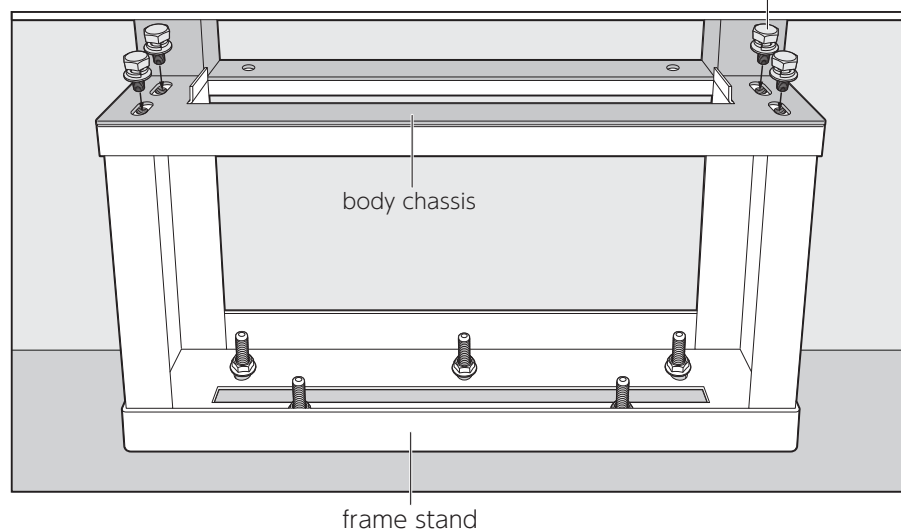





## Multipurpose seat YU2

### Step 3-Mount the handrail to the frame stand

- Put the handrail on the frame stand.
- Fix with hexagon upset head bolts(4places).




two hexagon upset head bolts

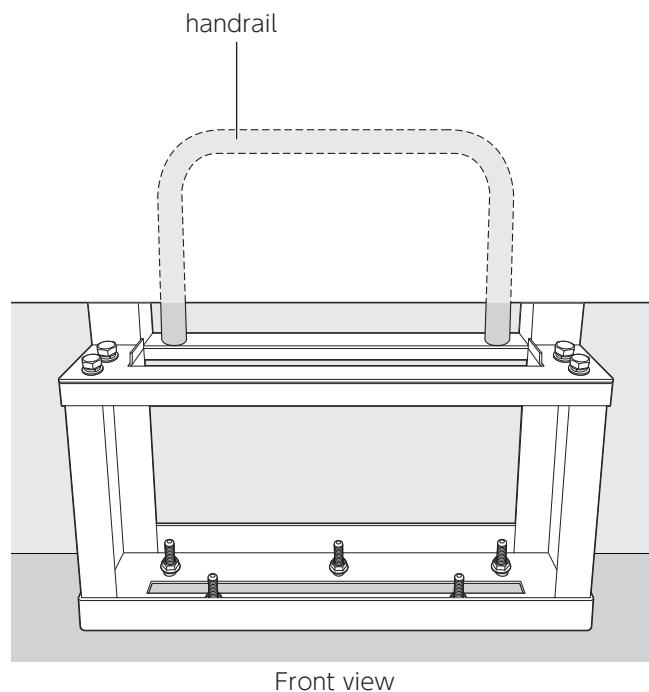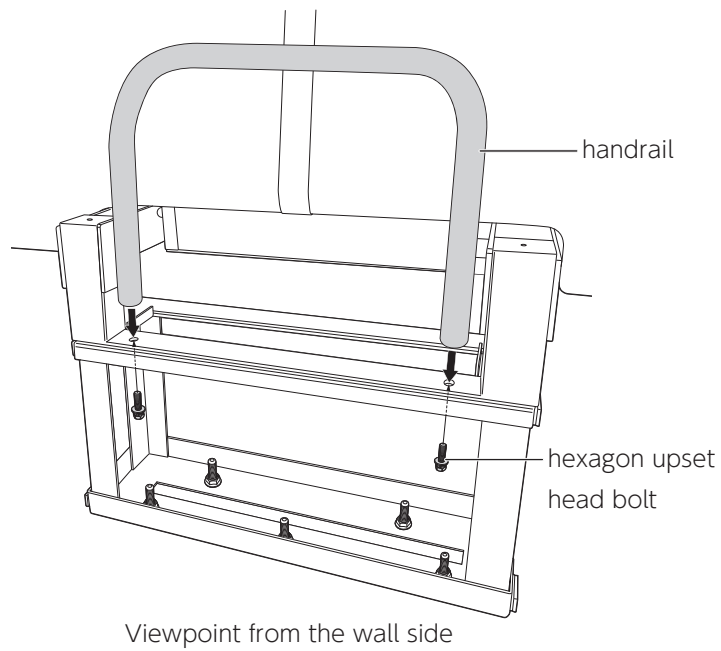


### Step 4-Mount the top cover to the body


① Open the seat panel.

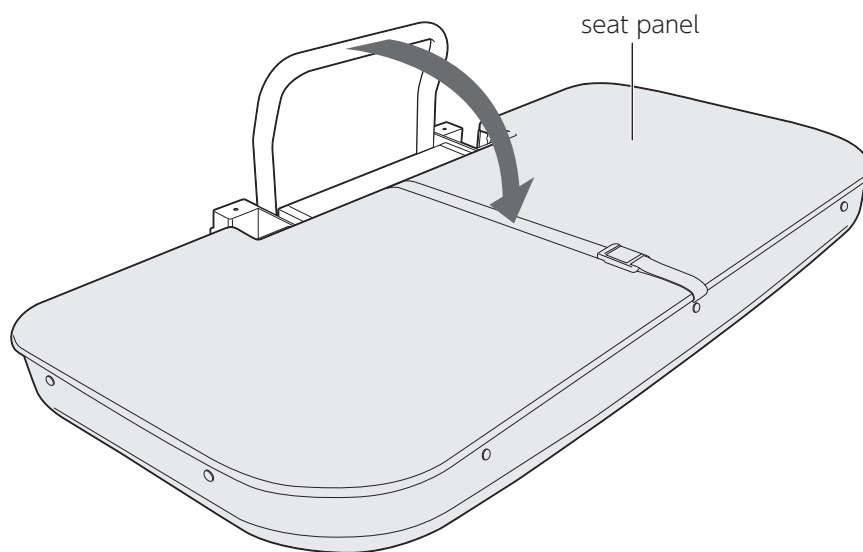


② Cover the body chassis with the top cover.

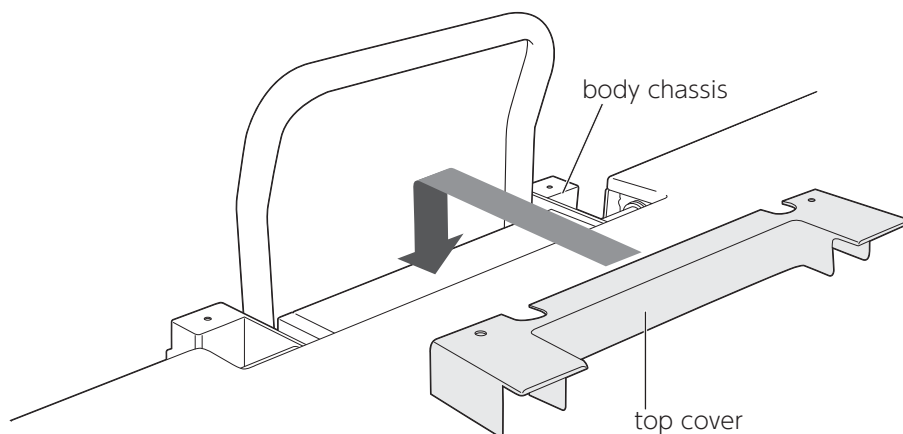

③ Fix with countersunk screws and rosette washers, and then cover on screw head covers (2 places).

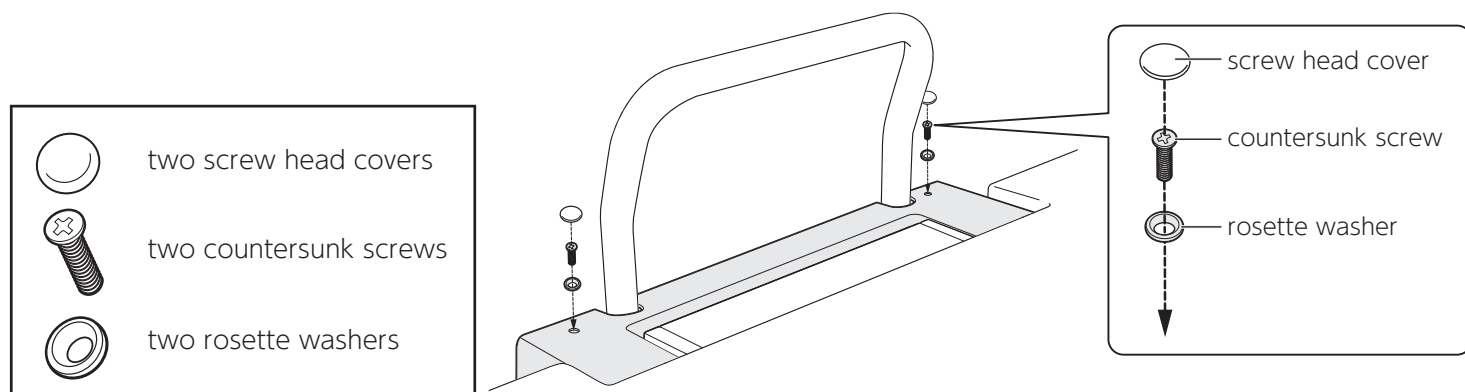

- Cover the frame stand cover on the frame stand.
- Fix with countersunk screws and rosette washers, and then cover on screw head covers (4 places).

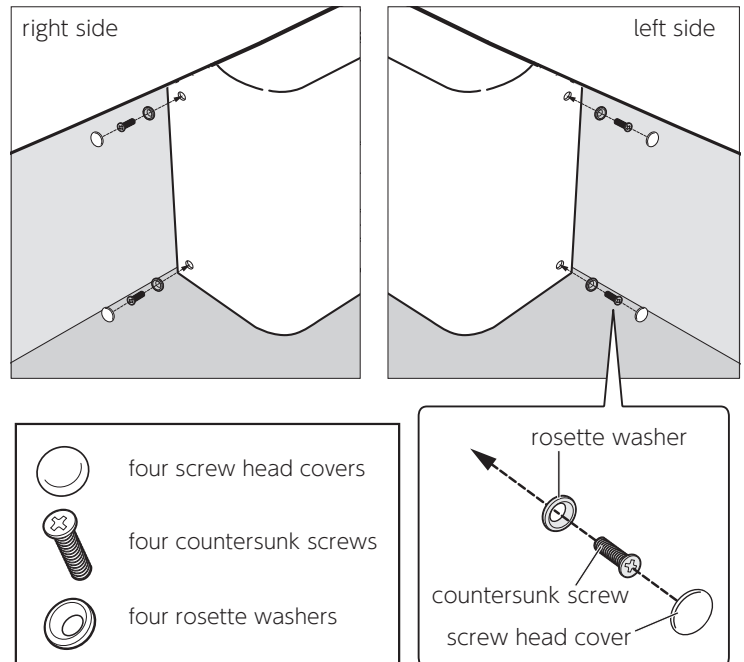

- ✓ Check for any strange noises or rattling.
- ✓ Check whether opening and closing can be done smoothly.
- ✓ Check that there are no abnormal noises or rattling on the handrail.

- ① Attach warning label near the product.
- ② Install the product, and then attach pictures, signs, and label to places that are easily visible such as the restroom or entrance of the facility.
- ③ Give this book to the manager of the facility.





# Instruction and Installation manuals

Multipurpose seat

## YU2

Sideways open type