

Instruction and Installation manuals

Fitting board

FM

Wall fixing type

For safety, please be sure read this book carefully in detail. You are responsible for the safe operation of this product.

IMPORTANT

- This product must be properly installed according to the manufacture's instructions.
- Please note that we will NOT be liable in the event an accident occurs due to improper use.
- Retain for future reference.

△ WARNING

△WARNING: DO NOT stand on the fitting board until the board is opened completely and placed on the floor.

△WARNING: DO NOT jump or make strenuous movement on the fitting board.

△WARNING: DO NOT use broken or damaged products.

△WARNING: DO NOT use for any purpose other than changing clothes.

△WARNING: DO NOT modify the product.


△WARNING: Carry out daily inspections to use the product safely.

△WARNING: Flammable-Keep Fire Away

PRODUCT

This product is changing board installed in restroom of facilities etc.



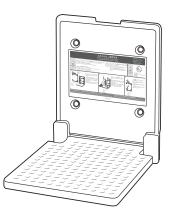

SPECIFICATION

- · Can change clothes hygienically by removing footwear.
- · Compact design with a thickness of 64 mm when stored.
- · Labelled usege instructions and safety masseges in four languages.
- · Product have mounting hardware included.
- · Product manufactured in JAPAN.


PRODUCT SIZE


Fitting board FM

Load capacity: 100 kg Item number: TS-FM

Size: W400 x D64 x H500 mm when storage W400 x D487 x H500 mm when use

Material: Polypropylene

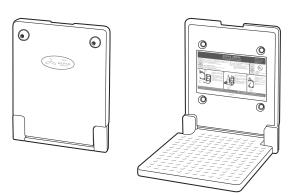

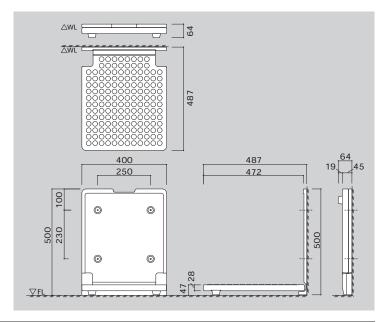

MAINTENANCE

Cleaning method

Normal cleaning method

- ① Soak a soft cloth with clean water or lukewarm water, and then wring out thoroughly before wiping.
- ② Wipe away any moisture thoroughly with a dry cloth.

Cleaning method for when the product is very dirty

- ① Wipe with a cloth soaked lightly with a mild detergent.
- ② Soak a soft cloth with clean water or lukewarm water, and then wring out thoroughly before wiping away any detergent.
- ③ Wipe away any moisture thoroughly with a dry cloth.

Caution: DO NOT use the following items that may damage the surface of the product.

- · Cleanser, detergent containing particles such as polishing powders.
- · Acidic detergent, alkaline detergent, chlorine bleach.
- · Nylon scrubbing brush, brush, etc.
- · Solvents such as thinner and benzine.

INSPECTION CRITERIA

- · There shall be no damage to the product.
- · Opening and closing operations shall be smooth with no rattling.
- · There shall be no looseness or removal of screws.
- The labels shall not be torn or faded, and the contents readable.

If there are any abnormalities

· Discontinue use immediately and contact your dealer.

Installation manual


SAFETY NOTES

- For safety, make sure to read this **Installation Manual** carefully and install the product correctly.
- We recommend that a professional installer set up the fitting board so that it is set up securely.
- Be sure to install the fitting board on the wall surface.
- We are NOT liable for any accidents and/or damage that may occur if the Fitting board is NOT set up correctly.
- · Correctly fix the SMARTPLUG securely to the concrete layer.


TOOLS NEEDED










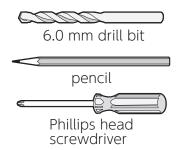

PACKING LIST

Product have mounting hardware included.

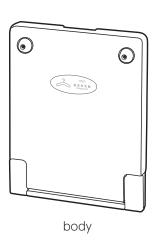



Instruction and Installation manuals (This book)



pictures, signs, and label



four flat head tapping screws





four SMARTPLUGS





four screw head covers





four rosette washers



Step 0-Packing confirmation

- ✓ Remove products from the shipping container and check for any freight damage.
- ✓ Please check if you have all the hardware.


Installation manual

Installing method for Fitting board FM

Step 1-Insert the SMARTPLUG into the wall surface

Installing method for SMARTPLUG

· Make marks on the wall surface (4places) for insertingthe SMARTPLUG.

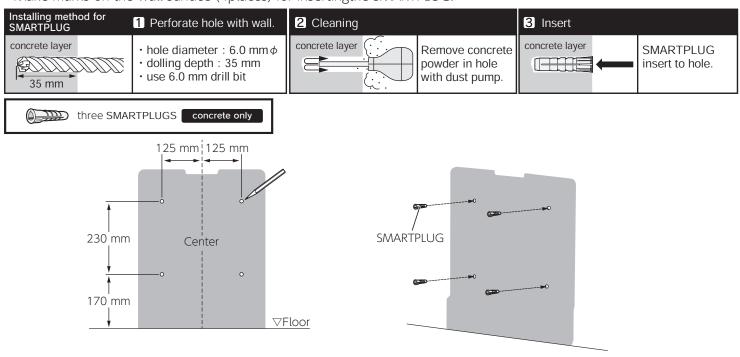




If the wall foundations are wood or LGS, DO NOT use SMARTPLUG.

Step 2-Mount the body

Place the wall panel of the body against the wall surface to which it is to be installed, and then fix securely with flat head tapping screws.



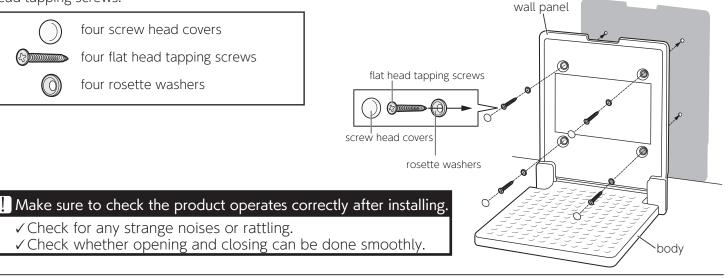

Step 3-Installation complete

· Install the product, and then attach pictures, signs, and label to places that are easily visible such as the restroom or entrance of the facility.

✓ Check for any strange noises or rattling.

· Give this book to the manager of the facility.

