



Instruction and Installation manuals

Baby's diapers changing table

V1

Lengthways open type

**For safety, please be sure read this book carefully in detail.
You are responsible for the safe operation of this product.**

IMPORTANT


- This product must be properly installed according to the manufacture's instructions.
- Please note that we will NOT be liable in the event an accident occurs due to improper use.
- Retain for future reference.

⚠ WARNING



- ⚠WARNING : DO NOT use for any child other than 1-24 months old.
- ⚠WARNING : The maximum recommended total weight for this baby's diapers changing table is 30 kg.
- ⚠WARNING : Keep an eye on your baby.
- ⚠WARNING : Be sure to fasten the attached belt.
- ⚠WARNING : Pay attention to the risk of falling.
- ⚠WARNING : DO NOT leave your baby alone while using the table.
- ⚠WARNING : DO NOT let your baby stand on the baby's diapers changing table.
- ⚠WARNING : DO NOT use for any purpose other than baby's diapers-changing.
- ⚠WARNING : DO NOT modify the product.
- ⚠WARNING : DO NOT use broken or damaged products.
- ⚠WARNING : Carry out daily inspections to use the product safely.
- ⚠WARNING : Flammable-Keep Fire Away

PRODUCT


This product is baby's diapers changing table installed in restroom of facilities etc.

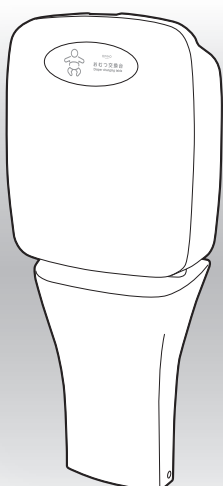

V1-S:Lengthways open type with steel frame stand
V1-SUS:Lengthways open type with stainless steel frame stand

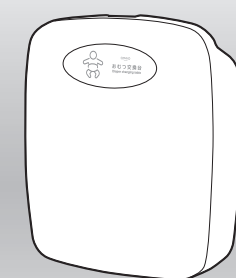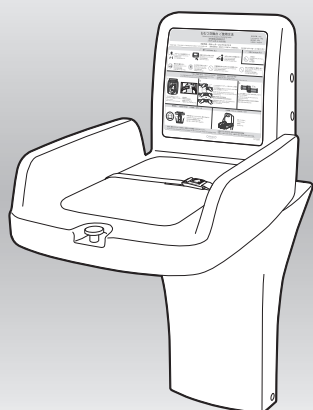

V1-W:Lengthways open type to wall mounted

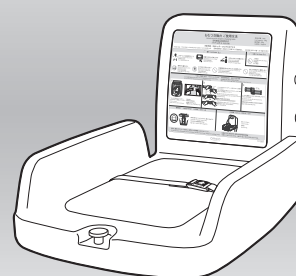


PRODUCT SIZE

Baby’s diapers changing table V1-S / V1-SUS

User’s age:For babies1–24 months old.
Load capacity:30 kg
Item number:TS-V1-S / TS-V1-SUS
Size:W635 x D255 x H1500 mm when storage
W635 x D840 x H1275 mm when use


Material:Polypropylene·Steel·Tree plywood
Urethane foam·Vinyl leather PVC
Stainless:TS-V1-SUS frame stand only

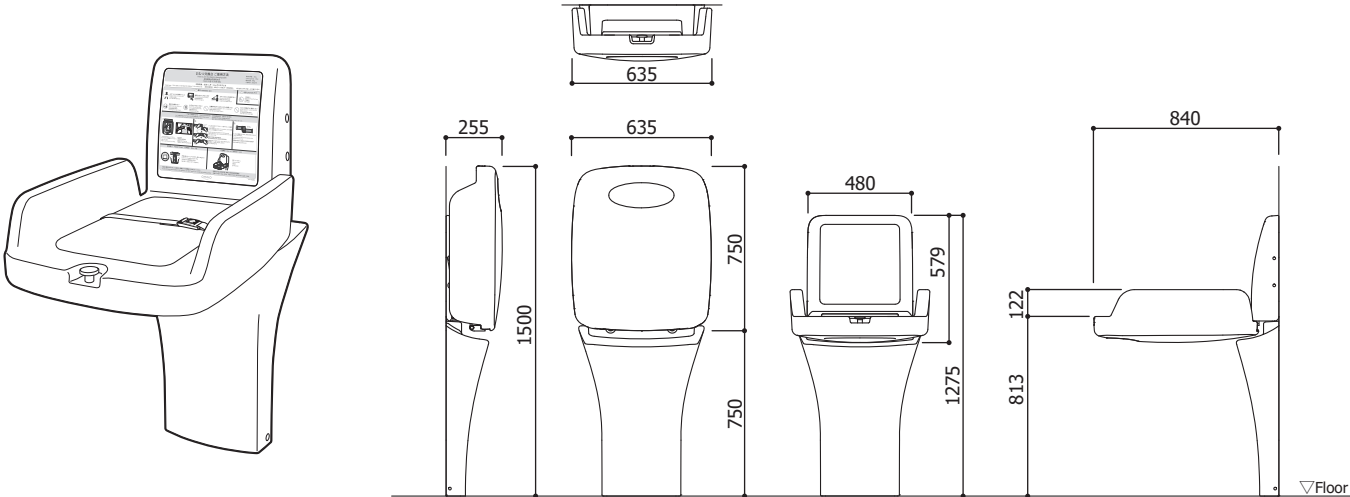

Baby’s diapers changing table V1-W


User’s age:For babies 1–24 months old.
Load capacity:30 kg
Item number:TS-V1-W
Size:W635 x D255 x H750 mm when storage
W635 x D840 x H579 mm when use

Material:Polypropylene·Steel·Tree plywood
Urethane foam·Vinyl leather PVC

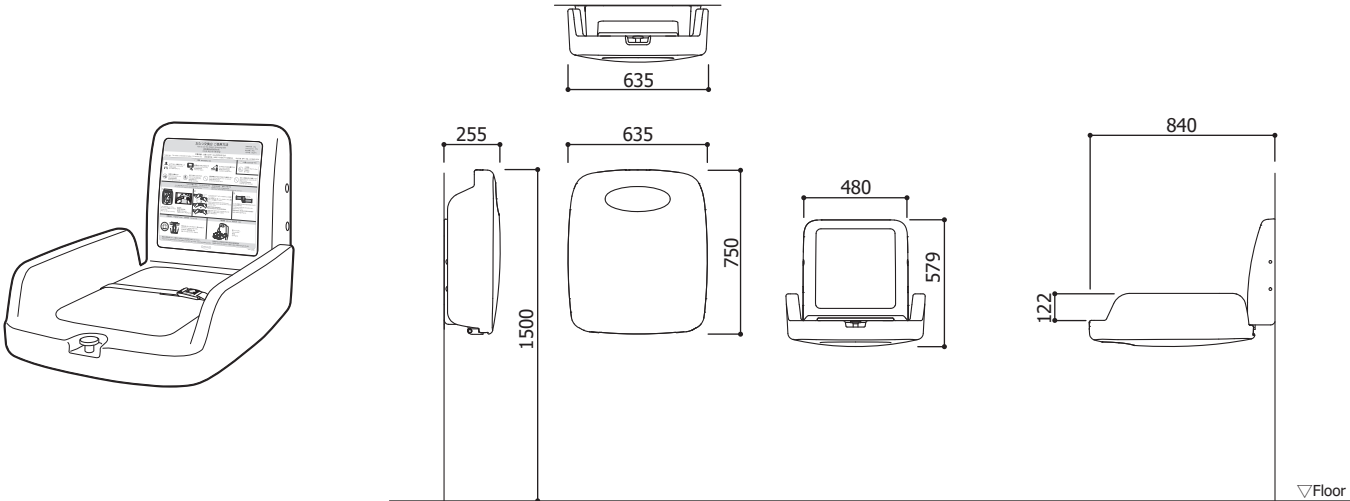


SPECIFICATION

The built-in gas spring allows smooth opening and closing operations.

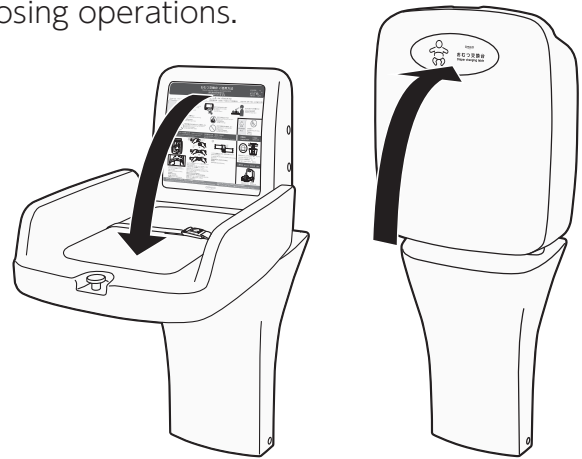


Can hang your belongings.

Load capacity : 10 kg

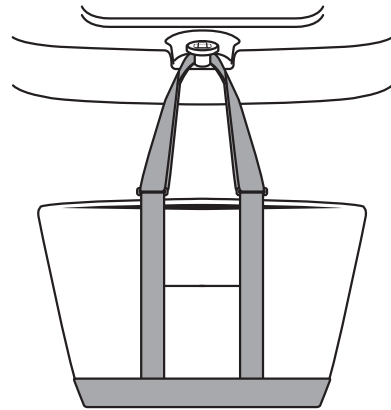


Magnet type buckles that can be attached and removed have been used.

NOTE: The seat belt is NOT designed to prevent your baby from falling.

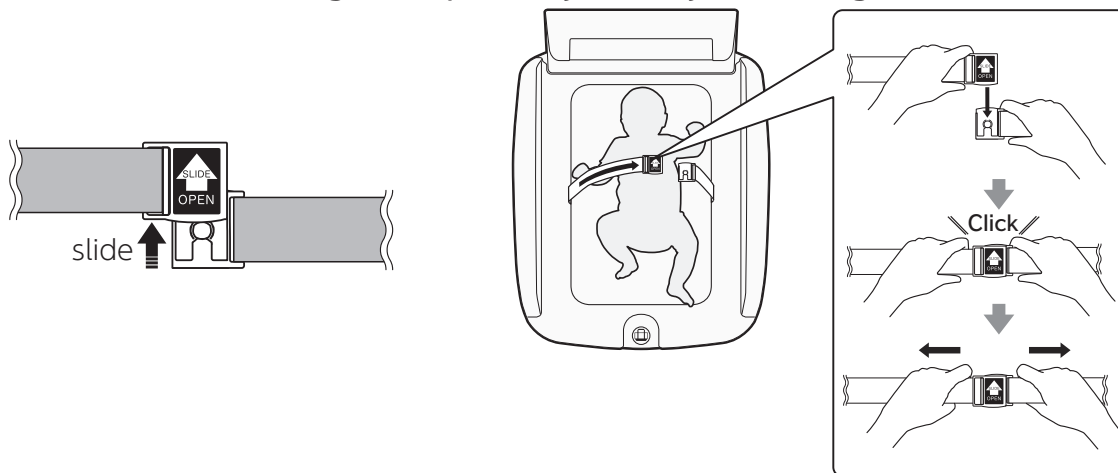

Labelled usage instructions and safety messages in four languages.

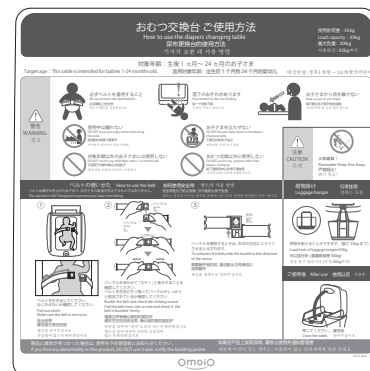

Product have mounting hardware included.

Product manufactured in JAPAN.

Cleaning method for plastic parts and Vinyl leather PVC

Normal cleaning method

- ① Soak a soft cloth with clean water or lukewarm water, and then wring out thoroughly before wiping.
- ② Wipe away any moisture thoroughly with a dry cloth.

Cleaning method for when the product is very dirty

- ① Wipe with a cloth soaked lightly with a mild detergent.
- ② Soak a soft cloth with clean water or lukewarm water, and then wring out thoroughly before wiping away any detergent.
- ③ Wipe away any moisture thoroughly with a dry cloth.

Caution : DO NOT use the following items that may damage the surface of the product.

- Cleanser, detergent containing particles such as polishing powders.
- Acidic detergent, alkaline detergent, chlorine bleach.
- Nylon scrubbing brush, brush, etc.
- Solvents such as thinner and benzine.

INSPECTION CRITERIA

- There shall be no damage to the product.
- Opening and closing operations shall be smooth with no rattling.
- There shall be no looseness or removal of screws.
- The labels shall not be torn or faded, and the contents readable.

If there are any abnormalities

- Discontinue use immediately and contact your dealer.

SAFETY NOTES

- For safety, make sure to read this **Installation Manual** carefully and install the product correctly.
- We recommend that a professional installer set up the baby's diapers changing table.
- We are NOT liable for any accidents and/or damage that may occur if the baby's diapers changing table is NOT set up correctly.
- Correctly fix the SMARTPLUG and anchor bolt securely to the concrete layer.
- The product is heavy. Carry out installation work with 2 or more people.

INSTALLATION SPACE

- Take into consideration the space required for using the product before installing.


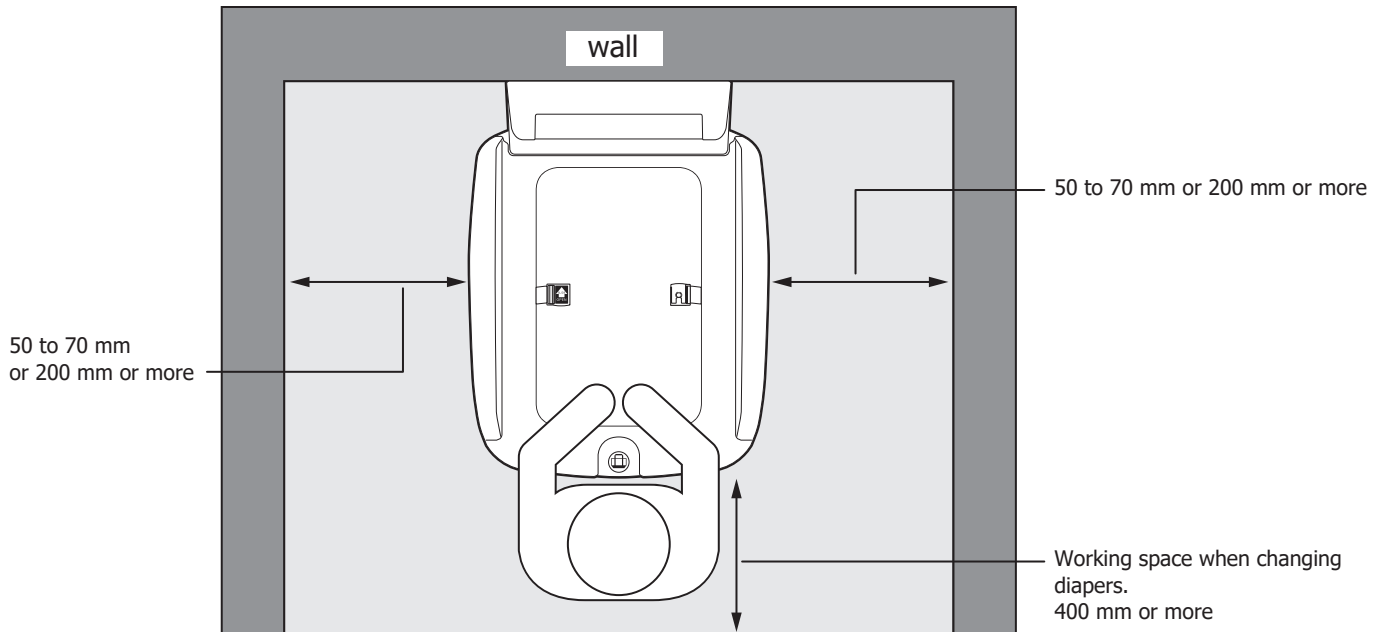



TABLE OF CONTENTS

Packing list	P. 5
Baby's diapers changing table V1-S / V1-SUS	PP. 6-8
Baby's diapers changing table V1-W	PP. 9-10


TOOLS NEEDED

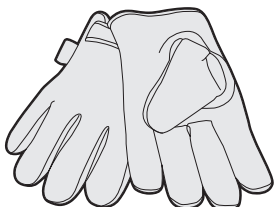


gloves



stud finder

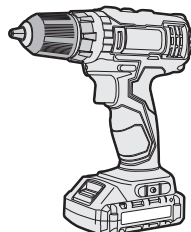


drill

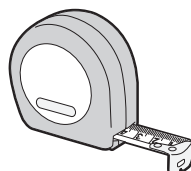


measuring tape



wrench

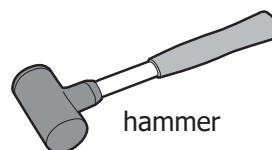

hammer



level



8.0 mm drill bit



8.5 mm drill bit




pencil



phillips head screwdriver

PACKING LIST

Product have mounting hardware included.

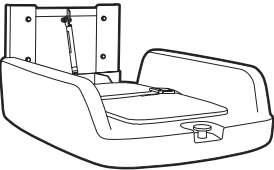


body



Instruction and Installation manuals (This book)



warning label

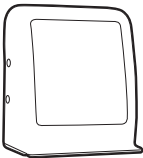

chassis cover



pictures, signs, and label



four screw head covers 




four countersunk screws 



four rosette washers 




four hexagon head bolts 



four flat washers 



frame stand

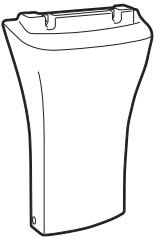

frame stand cover



four screw head covers 



four countersunk screws 



four rosette washers 




nine truss tapping screws 



nine flat washers 



nine SMARTPLUGS 

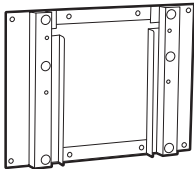

wall chassis



eight anchor bolts 



eight hexagon nuts with flange 

Step 0-Packing confirmation

- ✓ Remove products from the shipping container and check for any freight damage.
- ✓ Please check if you have all the hardware.




Baby's diapers changing table V1-S / V1-SUS


! NOTE  If the wall and floor foundations are wood or LGS, DO NOT use SMARTPLUG.

Step 1-Set up the frame stand

- ① Make marks on the wall surface (6 places) and the floor (3 places) for inserting SMARTPLUG. (**concrete only**)
- ② Install SMARTPLUG into the marked area. (**concrete only**)
- ③ Place the frame stand against the wall surface, and then fix the wall (6 places) and the floor (3 places) with truss tapping screws.

Installing method for SMARTPLUG

 <p>concrete layer</p>	<p>① Perforate hole with wall.</p> <ul style="list-style-type: none"> • hole diameter : 8.0 mm ϕ • drilling depth : 45 mm • use 8.0 mm drill bit
 <p>concrete layer</p>	<p>② Cleaning</p> <p>Remove concrete powder in hole with dust pump.</p>
 <p>concrete layer</p>	<p>③ Insert SMARTPLUG insert to hole.</p>



five SMARTPLUGS




concrete only



nine truss tapping screws



nine flat washers

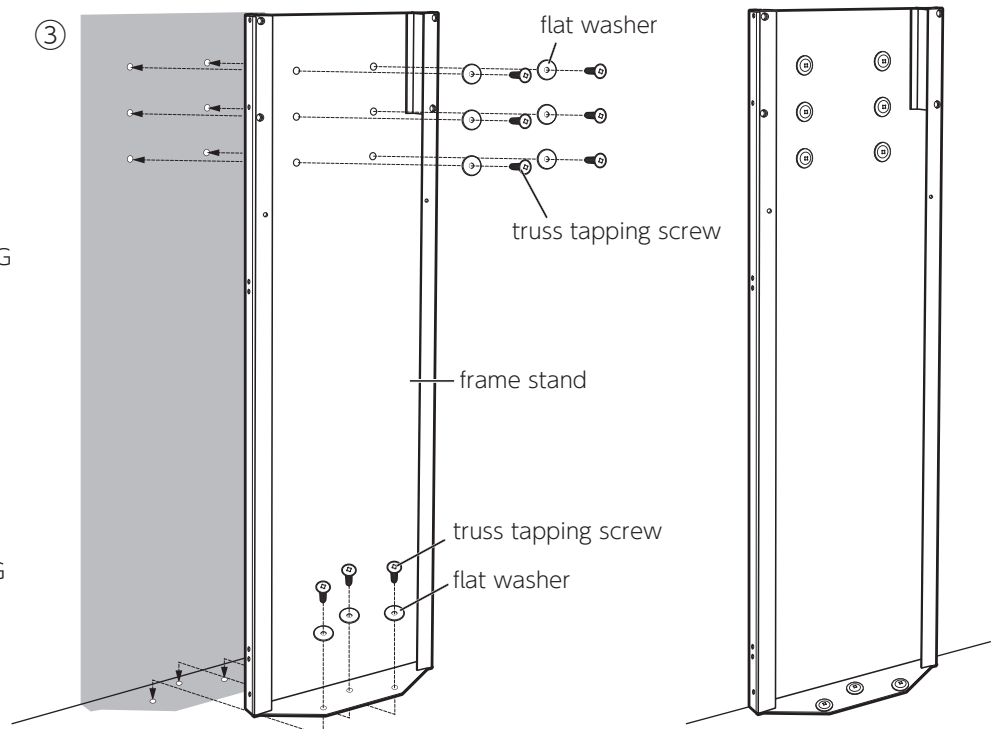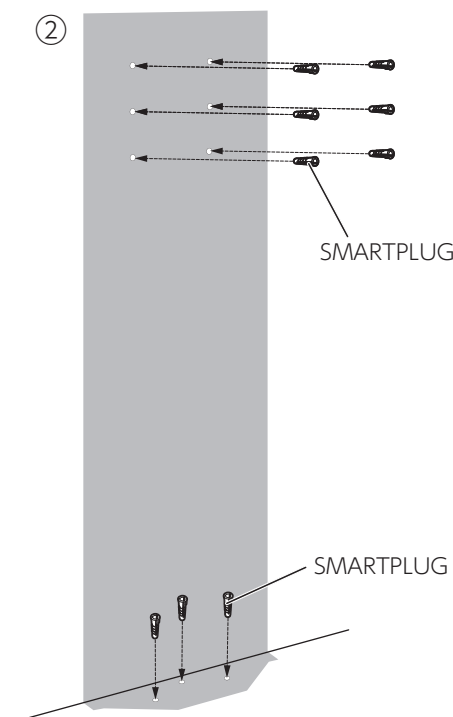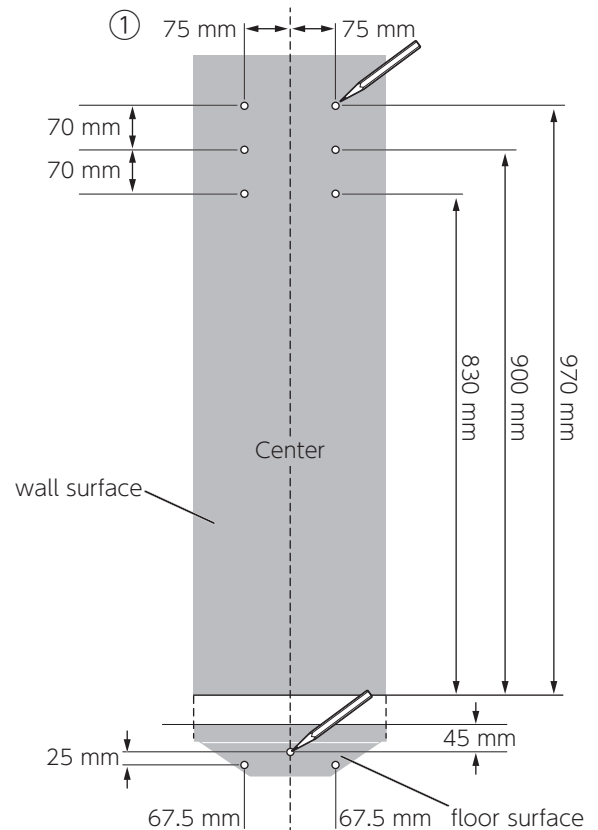


Installation manual

Baby's diapers changing table V1-S / V1-SUS

Step 2-Mount the frame stand cover


① Put the frame stand cover on the frame stand.

② Fix with countersunk screws and rosette washers, and then cover on screw covers (4 places).

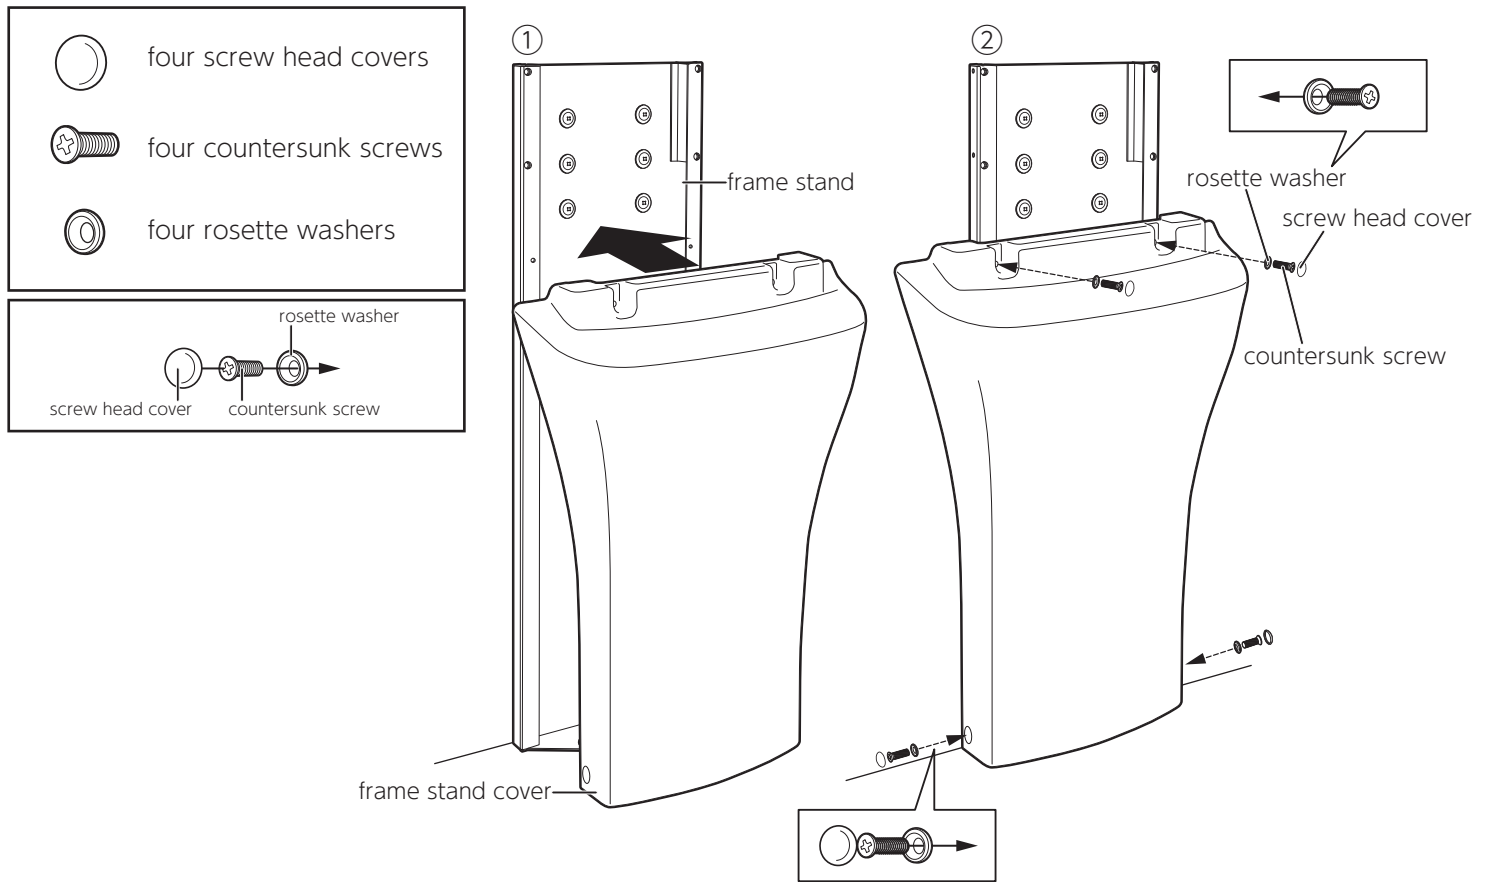

Step 3-Mount the body

① Pass the hexagon head bolts through the bolt holes (4 places) of the body chassis, and then fix them.

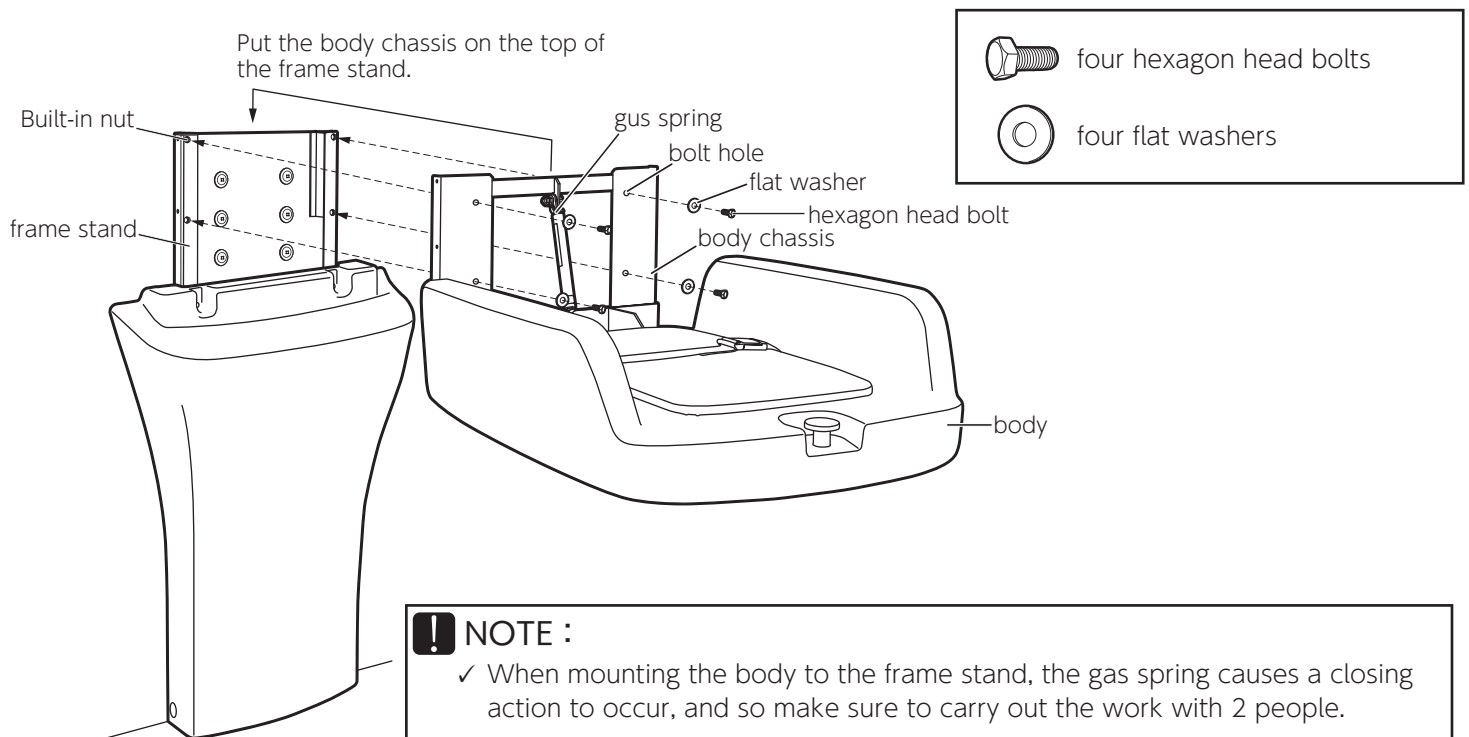



NOTE :

- ✓ When mounting the body to the frame stand, the gas spring causes a closing action to occur, and so make sure to carry out the work with 2 people.
- ✓ The built-in nut has a locking function. When tightening bolts, you will experience resistance from the midway point, but make sure to tighten them securely so that there are no gaps between the body chassis and frame stand.

Baby's diapers changing table V1-S / V1-SUS

Step 4-Mount the shassis cover to the body shassis

- ① Put the chassis cover on the body chassis.
- ② Fix with countersunk screws and rosette washers, and then cover on screw covers (4 places).

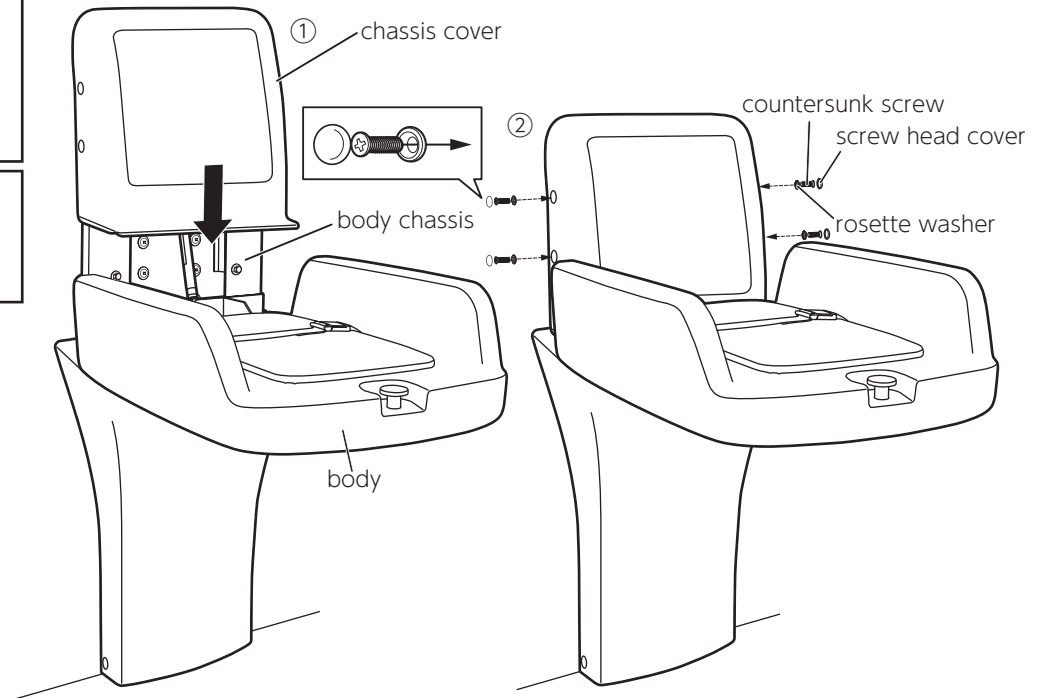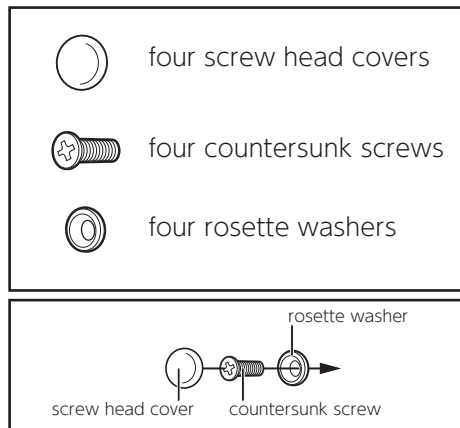

! Make sure to check the product operates correctly after installing.

- ✓ Check for any strange noises or rattling.
- ✓ Check whether opening and closing can be done smoothly.

Step 5-Installation complete

- ① Attach warning label near the product.
- ② Install the product, and then attach pictures, signs, and label to places that are easily visible such as the restroom or entrance of the facility.
- ③ Give this book to the manager of the facility.




Installation manual

Baby's diapers changing table V1-W

Wall foundations : RC

Step 1-Set up the wall shassis

① Place the wall chassis against the wall surface and mark 8 places.

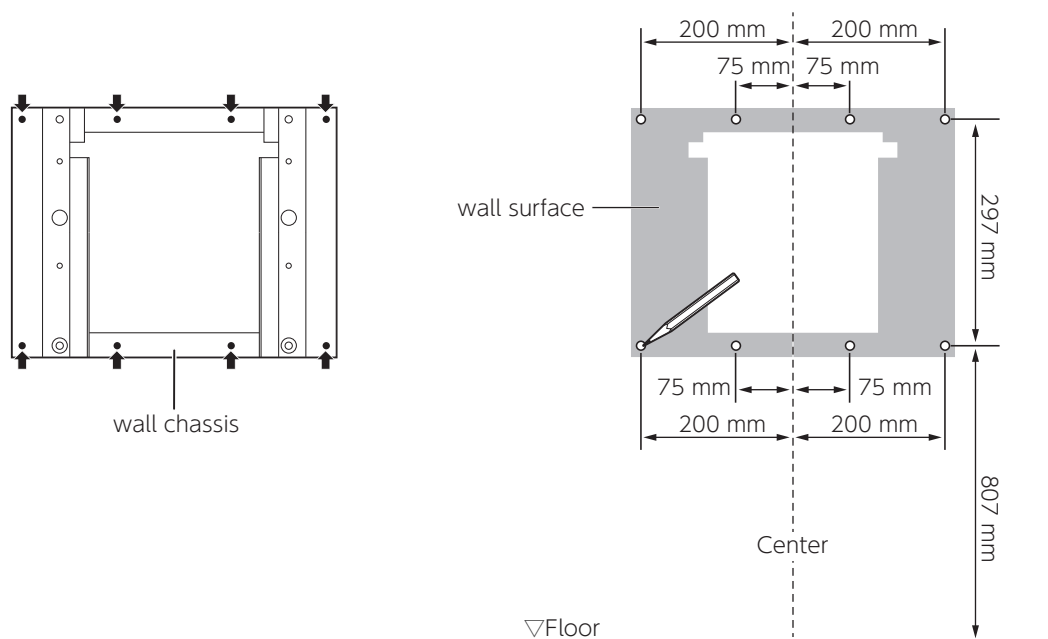


② Drive anchor bolts into the marked area.



eight anchor bolts

Installing method for anchor bolt


concrete layer	43 mm or more	① Perforate hole with wall. • hole diameter : 8.5 mm ϕ • drilling depth : 43 mm or more • use 8.5 mm drill bit
concrete layer		② Remove concrete powder in hole with dust pump.
concrete layer	anchor bolt	③ Anchor bolt Insert to hole.
concrete layer	anchor pin hammer	④ Hit anchor pin with hammer.

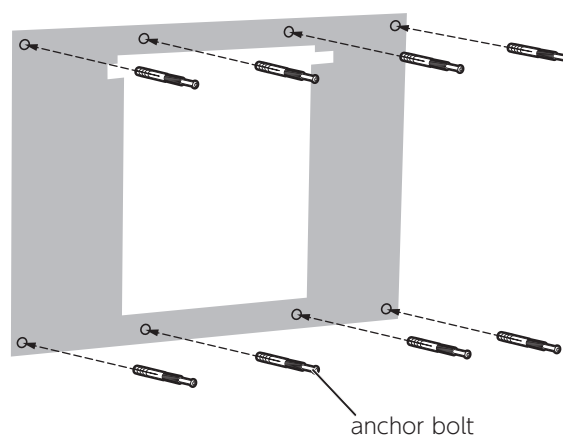

③ Fix with hexagon nuts with flange.



eight hexagon nuts with flange

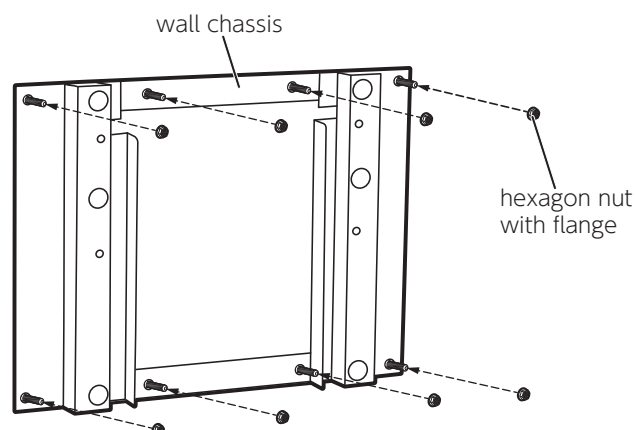


Baby's diapers changing table V1-W


Wall foundations : RC

Step 2-Mount the body

① Pass the hexagon head bolts through the bolt holes (4 places) of the body chassis, and then fix them.

 four hexagon head bolts

 four flat washers

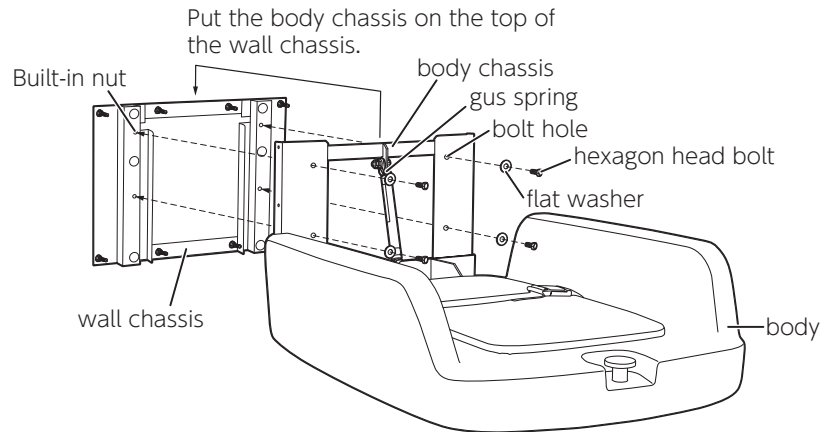

! NOTE :

- ✓ When mounting the body to the wall chassis, the gas spring causes a closing action to occur, and so make sure to carry out the work with 2 people.
- ✓ The built-in nut has a locking function. When tightening bolts, you will experience resistance from the midway point, but make sure to tighten them securely so that there are no gaps between the body chassis and wall chassis.



Step 3-Mount the shassis cover to the body chassis

- ① Put the chassis cover on the body chassis.
- ② Fix with countersunk screws (4 places).

 four screw head covers

 four countersunk screws

 four rosette washers

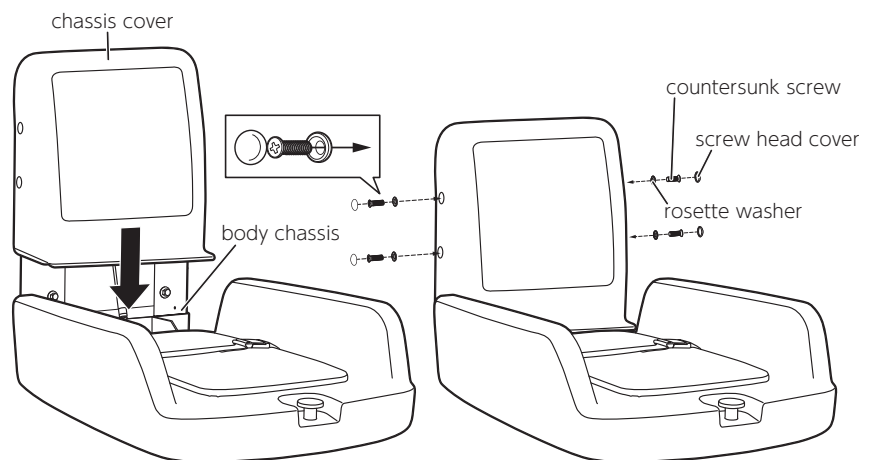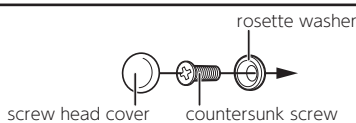


! Make sure to check the product operates correctly after installing.

- ✓ Check for any strange noises or rattling.
- ✓ Check whether opening and closing can be done smoothly.

Step 4-Installation complete

- ① Attach warning label near the product.
- ② Install the product, and then attach pictures, signs, and label to places that are easily visible such as the restroom or entrance of the facility.
- ③ Give this book to the manager of the facility.

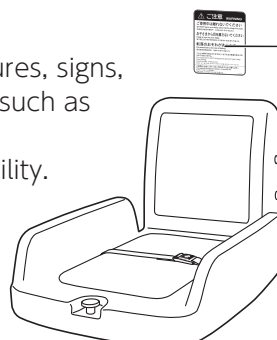

warning label



pictures, signs, and label



Instruction and Installation manuals

Baby's diapers changing table

V1

Lengthways open type